

Apollo GoboPro+ LED Outdoor Profile

Important Safety Instructions

When using your projection equipment basic safety precautions should be followed:

1. Read and understand all instructions before using this equipment.
2. Close supervision is necessary when the Apollo GoboPro+ LED Outdoor Profile is used by, or near, children.
3. Care must be taken, as burns can occur from touching hot parts.
4. Do not operate the Apollo GoboPro+ LED Outdoor Profile with a damaged cord, or if the unit has been dropped or otherwise damaged, until it has been examined by a qualified electrician.
5. Position the cord so that it will not be tripped over, pulled, or come into contact with hot surfaces.
6. If an extension cord is necessary, ensure a current rating of at least equal to that of the Apollo GoboPro+ LED Outdoor Profile. Cords rated for less amperage than the unit may overheat.
7. Always unplug Apollo GoboPro+ LED Outdoor Profile from electrical outlet before cleaning and servicing and when not in use. Never yank cord to pull plug from outlet. Grasp plug and pull to disconnect.
8. Let appliance cool completely before packing. Loop cord loosely around unit when storing.
9. To reduce risk of electric shock, do not immerse product in water or other liquids.
10. To reduce the risk of electric shock, do not dismantle this unit.
11. Do not attempt to service the projector unless you are qualified and working under the direction of the manufacturer.
12. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electrical shock, or personal injury.
13. A safety cable must be attached to the projector and secured to an immovable object where applicable. The securing point must be able to withstand the shock weight of the projector should it fall.
14. After any maintenance or cleaning, all parts must be absolutely dry before reassembling the projector.
15. During focussing of the projected image beware of moving the projection lens too far, as this may cause the lens to become separated from the projector, and perhaps to dropped and broken which may cause injury.
16. Flammable surfaces should be at least 2 feet away from the front of the projector.

